

From metagenomic gene discovery to enzymatic breakdown of crosslinks in plant cell wall biopolymers

Dominic Wong



Bioproducts Chemistry & Engineering
Western Regional Research Center
Agricultural Research Service
U.S. Department of Agriculture
Albany, California


Research Objectives:

- ❖ *Research key enzymes and their cooperative mode of action on breaking down plant cell wall polymers.*



- ❖ *Research the efficacy of using hemicellulases and other non-cellulase enzymes prior to, during, or after pretreatment.*

*For conversion of agricultural wastes to
biofuel and high-value products*

Biomass conversion to high value products

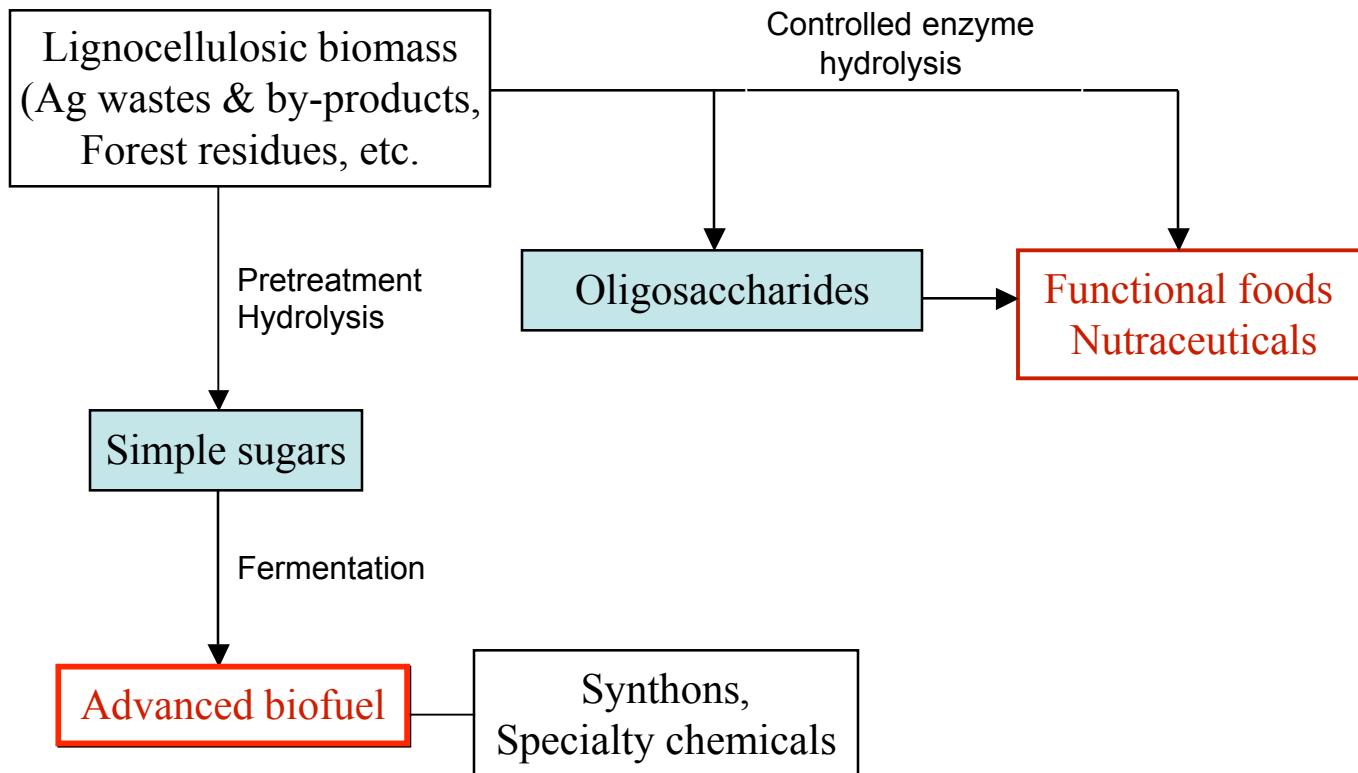


Cell wall polymers

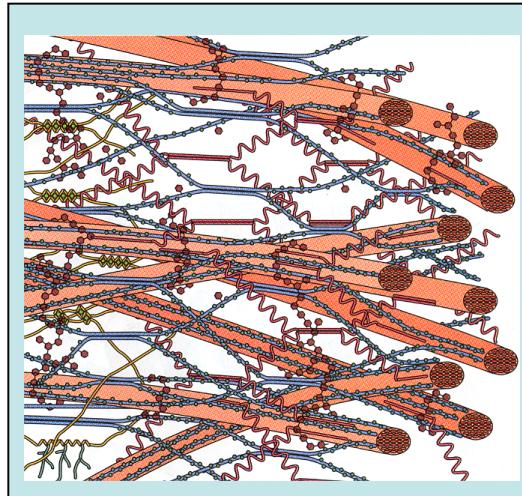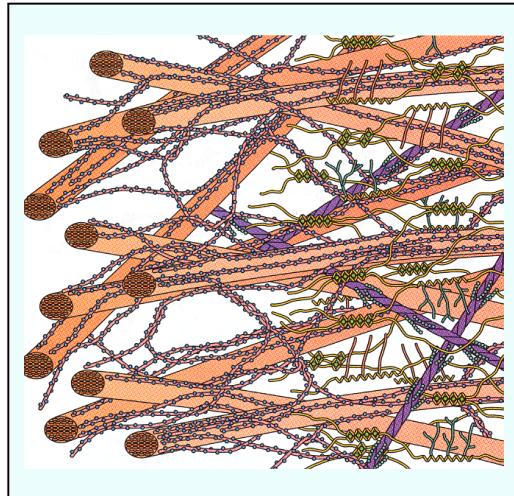

Biomass source	Cellulose	Hemi-	Lignin
	(% dry weight)		
Agricultural residues	38	32	17
Corn fiber	15	35	8
Corn cob	45	35	15
Corn stover	40	25	17
Rice straw	35	25	12
Wheat straw	30	50	20
Sugarcane bagasse	40	24	25
Herbaceous energy crops	45	30	15
Switch grass	45	30	12
Coastal Bermuda grassss	25	35	6
Sorted municipal solid waste	45	9	10
Underutilized & short rotation hardwoods	50	23	22

(Saha 2003; Wyman 1994)

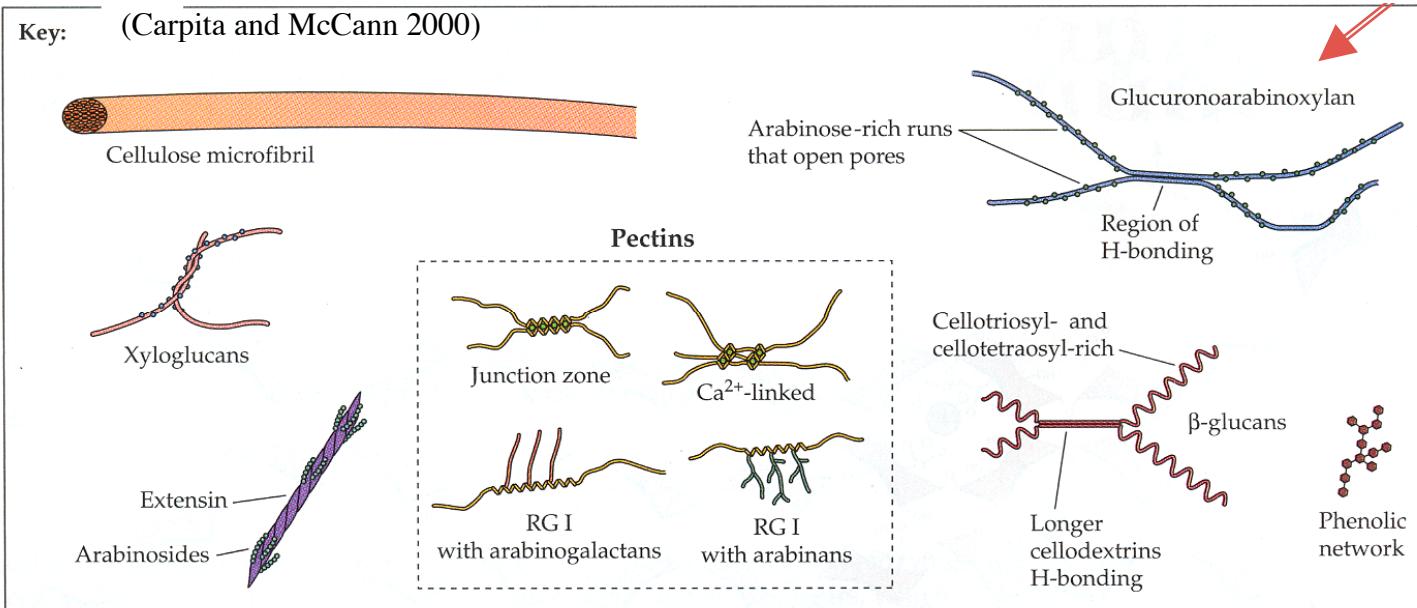

Type I -
All dicots & one-half of monocots (roses, sunflowers, maples, oaks beans, spinach, sugar beet)

Type II -
The “commelinoid” of monocots (palms, gingers, cypresses, and grasses- including grain crops)

Biomass Degradation - Known enzyme groups found in nature

Cellulose: (3)

endoglucanase, exoglucanase, cellobiosidase

Hemicellulose: (15):

Glucuronoarabinoxylan: (6) endoxyylanase, β -xylosidase, α -L-arabinofuranosidase, α -glucuronidase, acetylxylan esterase, feruloyl esterase

Xyloglucan: (6) endo-xyloglucanase, xyloglucosidase, β -glucosidase, α -xylosidase, β -galactosidase, fucosidase

β -Glucan: (3) β -glucan endohydrolases, β -glucan exohydrolases, β -glucosidase

Pectins: (17)

Hydrolases: (5) endopolygalacturonase, exopolygalacturonase, rhamnogalacturonan hydrolase, rhamnogalacturonan rhamnohydrolase, xylogalacturonanhydrolase

Lyases: (4) endopectate lyase, exopectate lyase, pectin lyase (endo), rhamnogalacturonan lyase


Esterases: (3) pectin methyl esterase, pectin acetyl esterase, rhamnogalacturonan acetyl esterase

Auxiliary enzymes: (5) galactanase, arabinanase, β -galactosidase, α -L-furanosidase, feruloyl esterases


Lignin: (3) lignin peroxidase, manganese-dependent peroxidase, laccase



Bioconversion of hemicellulose

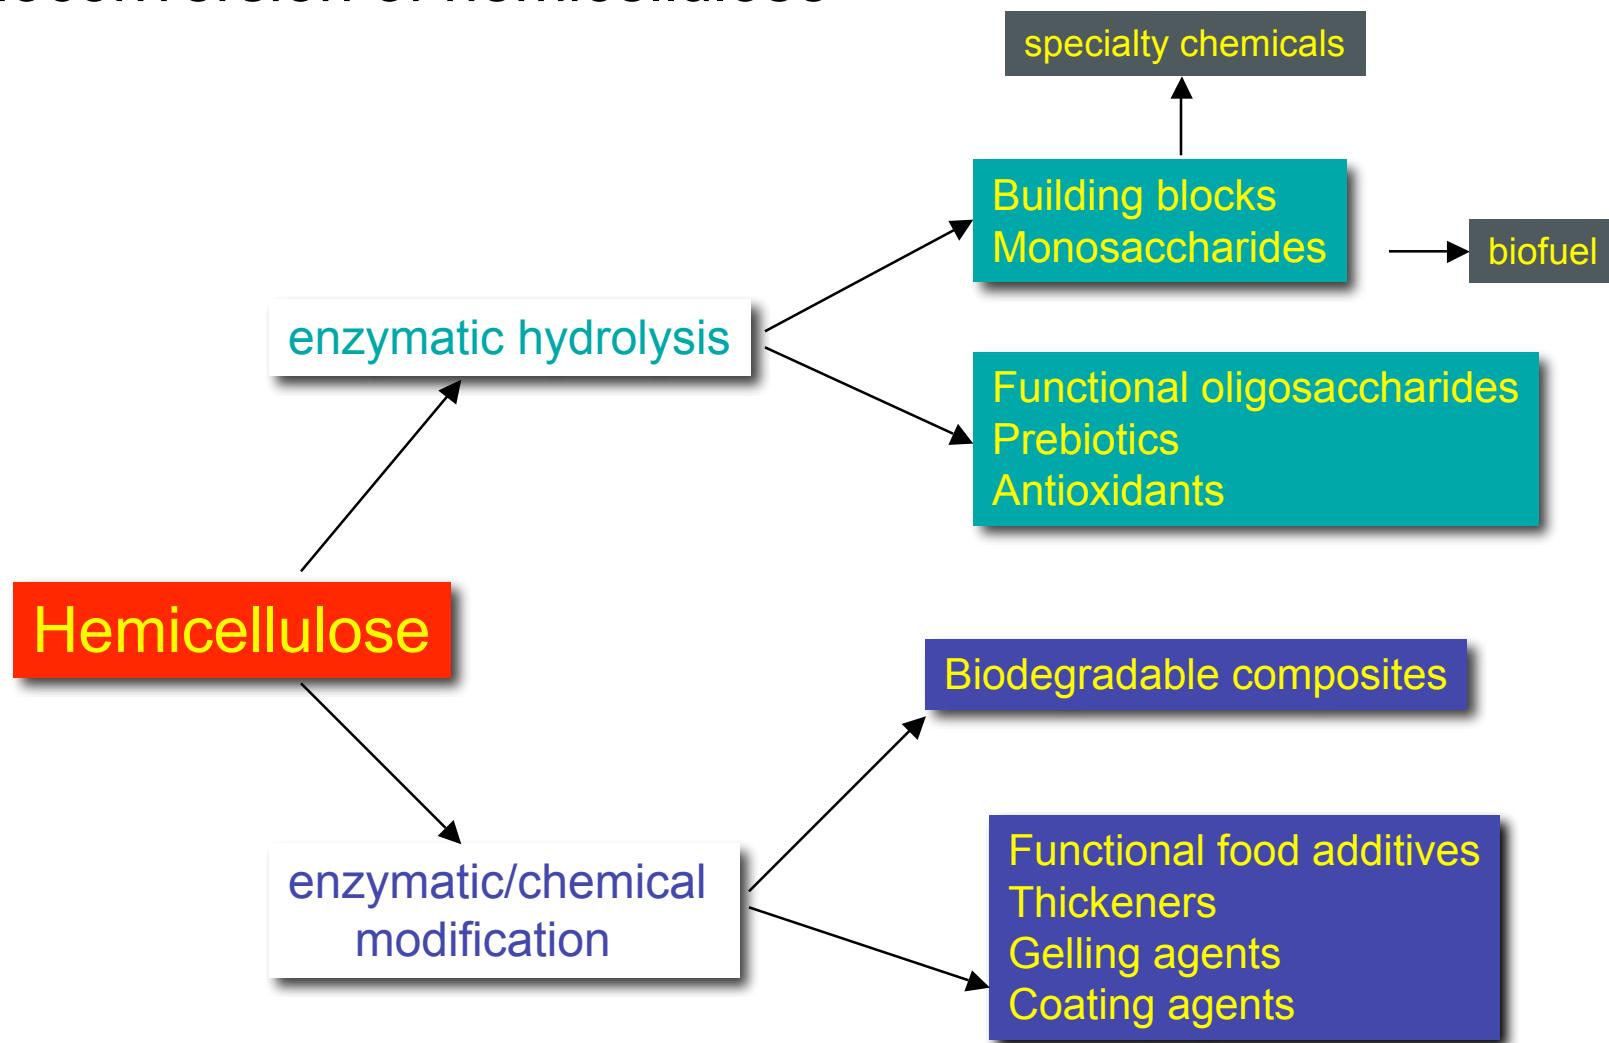


Glucuronoarabinoxylan

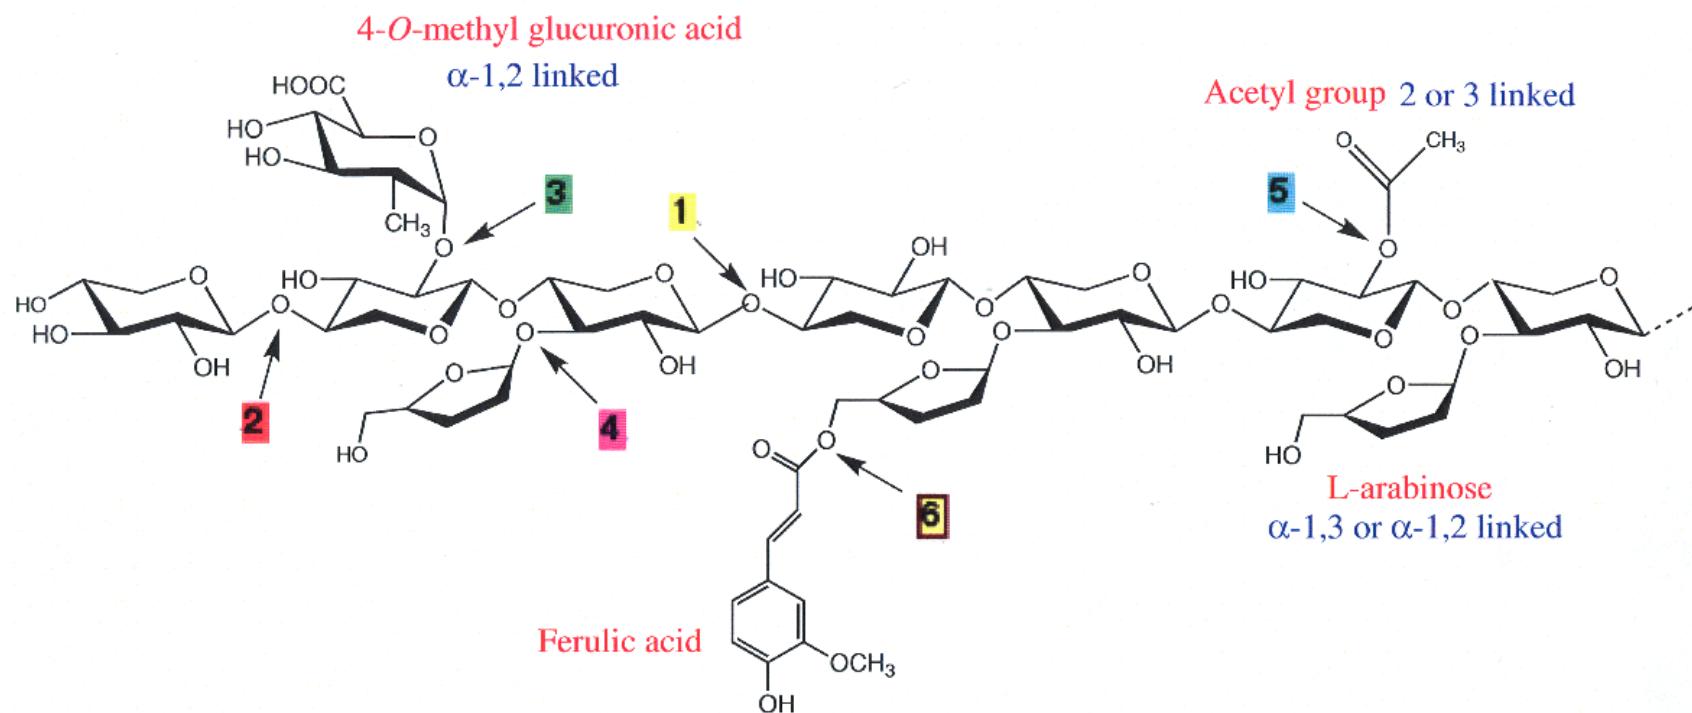

- 1 endo- β -1,4-xylanase (EC3.2.1.8)
- 2 β -xylosidase (EC 3.2.1.37)
- 3 α -glucuronidase (EC 3.2.1.139)
- 4 α -L-arabinofuranosidase (EC 3.2.1.55)
- 5 acetylxylan esterase (EC 3.1.1.72)
- 6 feruloyl esterase (EC 3.1.1.79)


Chemical structures of crosslinks

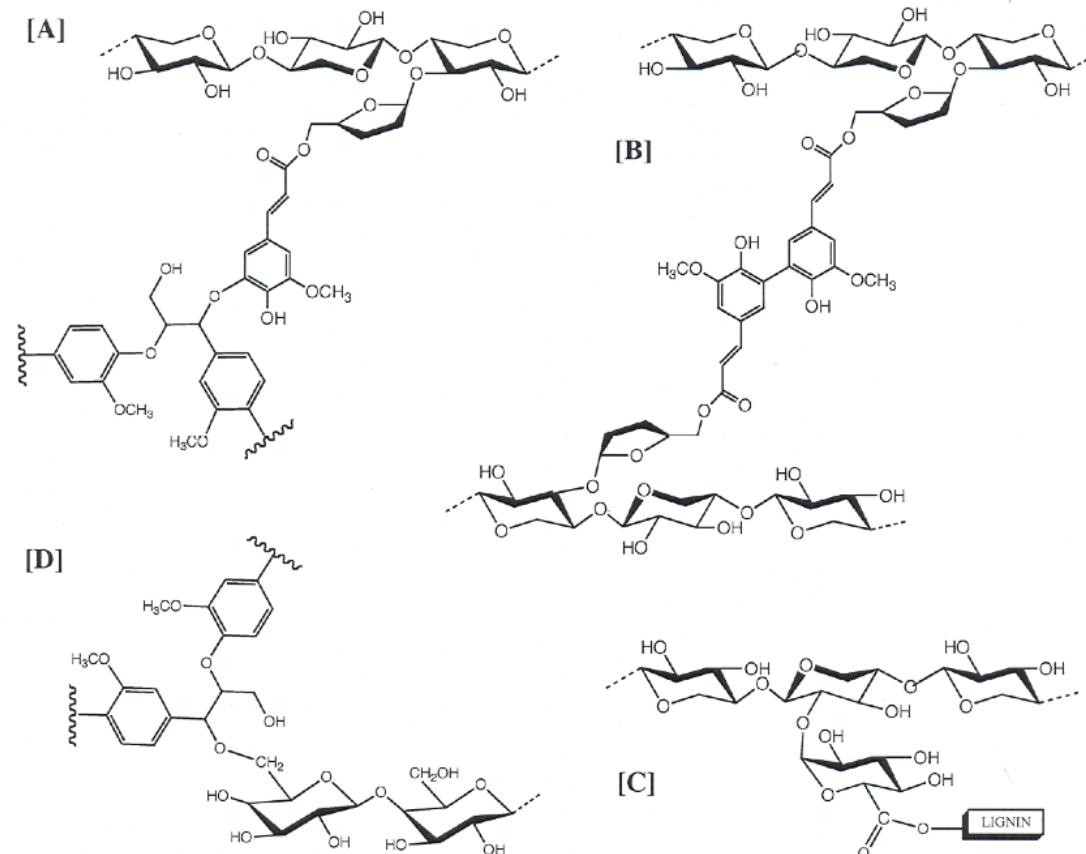

(A) xylan-ferulic acid-lignin; (B) arabinoxylan-diferulic acid-arabinoxylan
(C) xylan-glucuronic acid-lignin; (D) pectin-galactan-lignin

Novel Genes from Metagenomes


“Metagenome” = the collective genomes of all microorganisms in a given habitat (Handerisman et al. 1998; Schmidt et al. 1991)

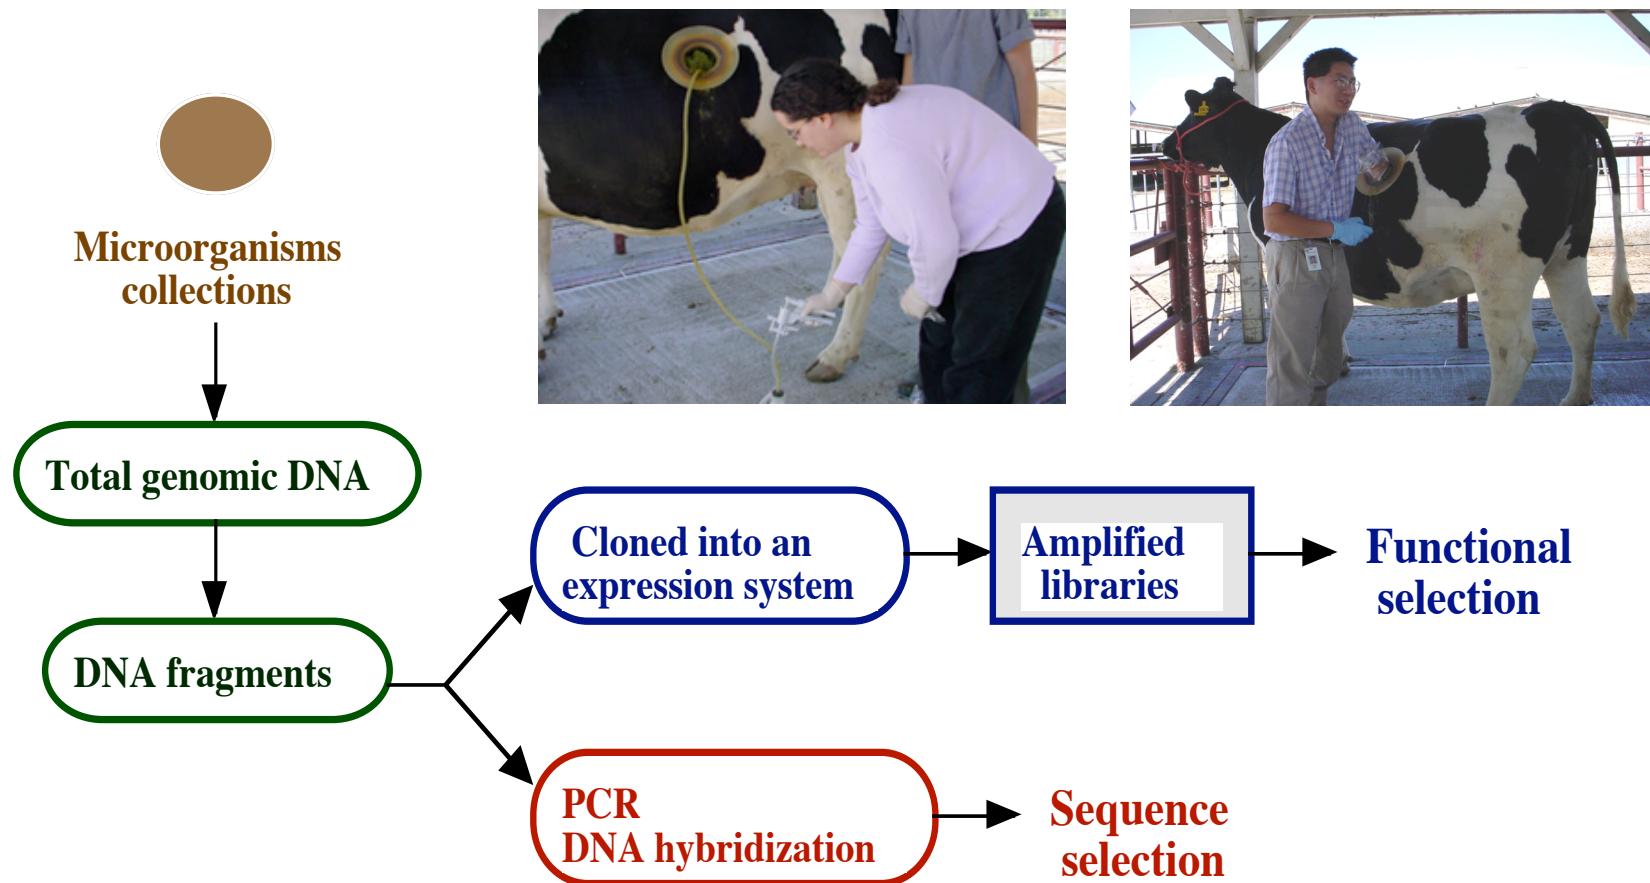


Q-Bot



Q-Pix

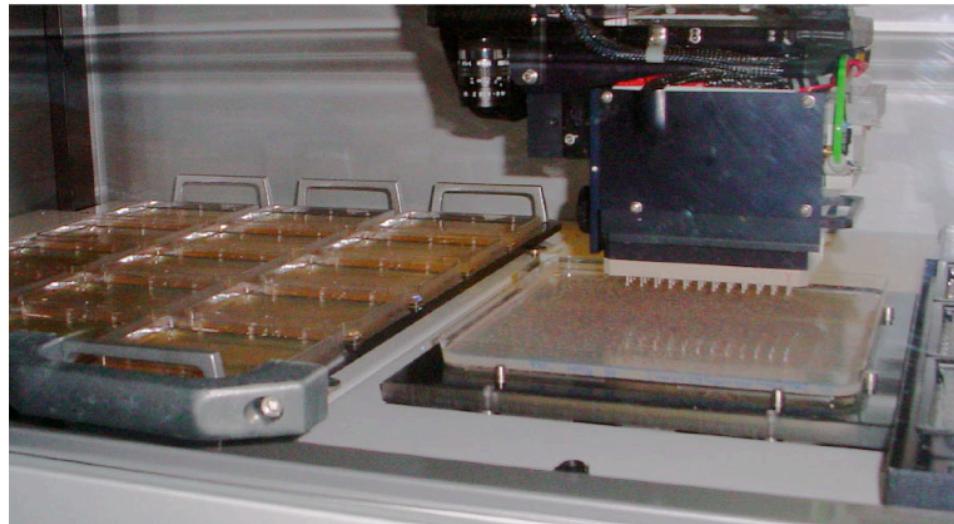


High-throughput screening active clones

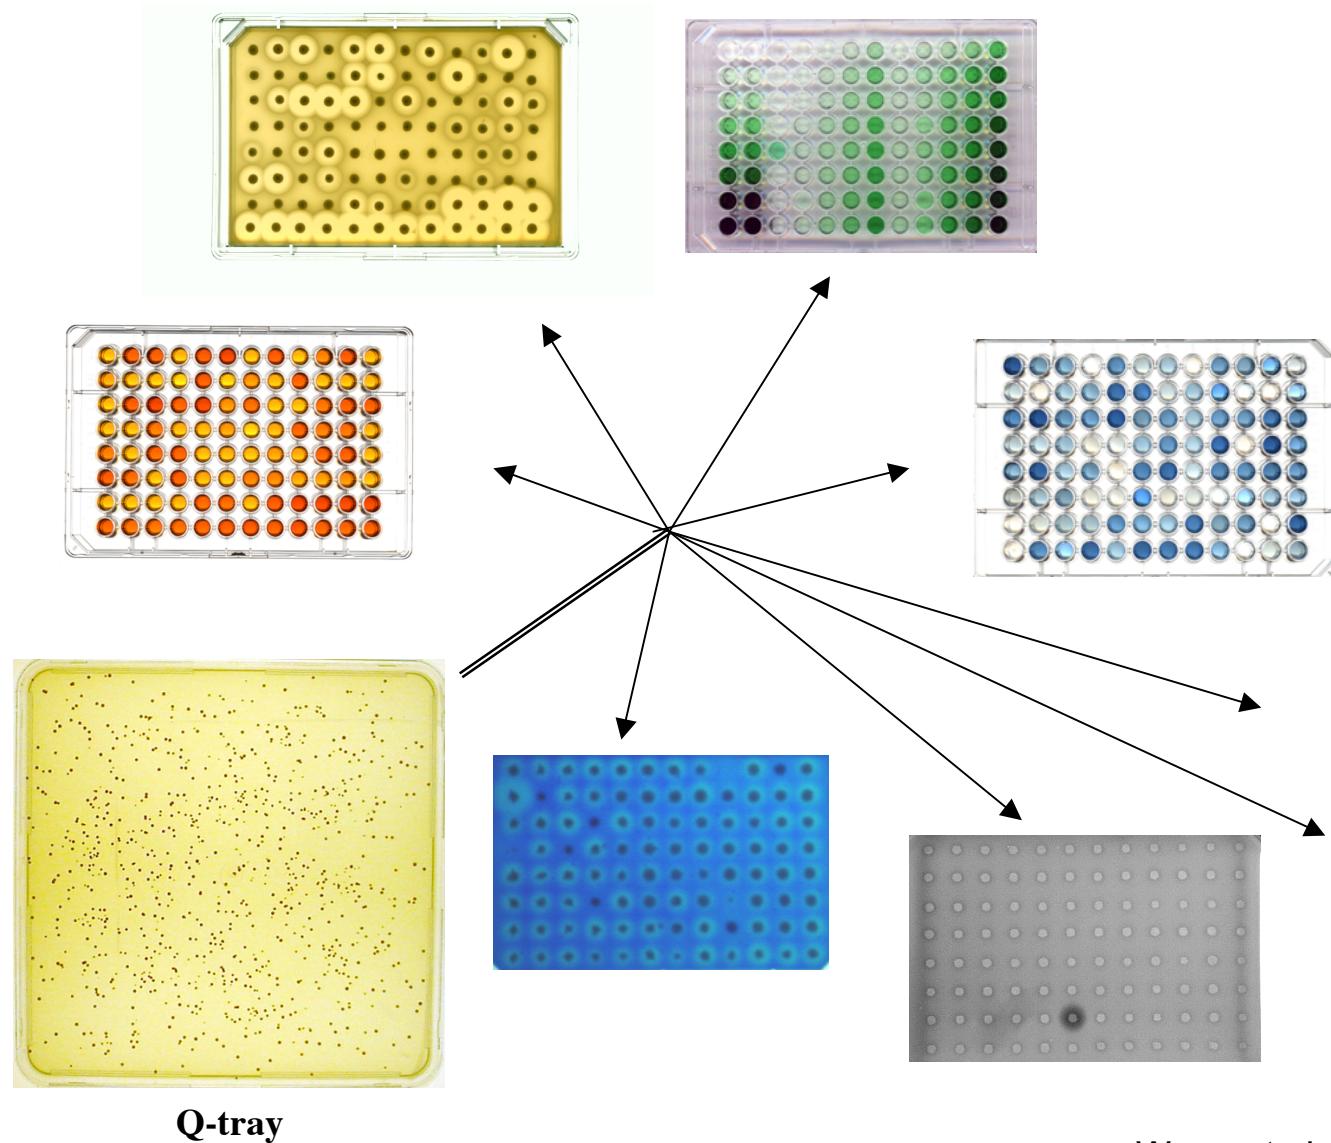


Wong et al. US Patent 8,361,764 B1


High-throughput screening active clones

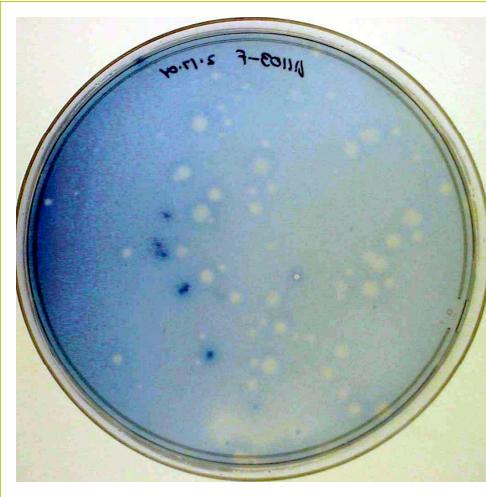

Screening for **xylanase genes**
from metagenomic libraries

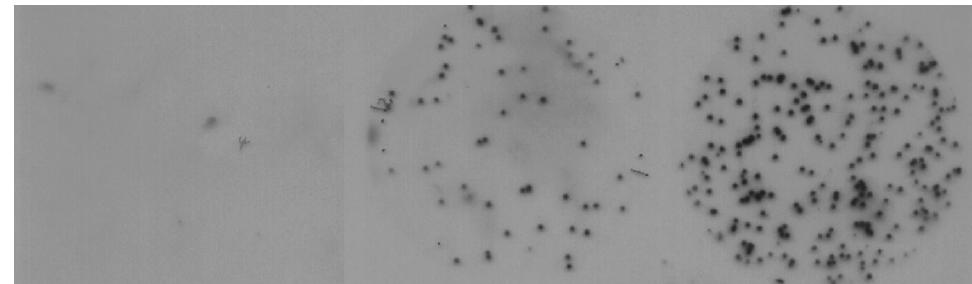


Screening for **amylase genes** from
cDNA (λ ZapII) libraries

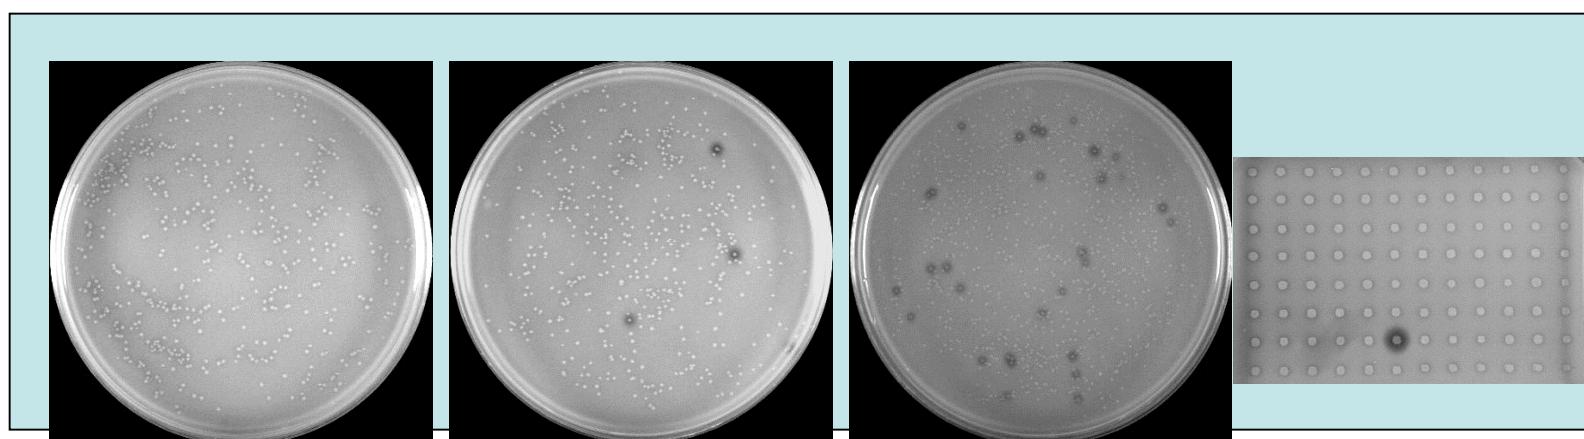


Screening for **feruloyl esterase genes**
from metagenomic libraries

FAE gene isolation, cloning and expression

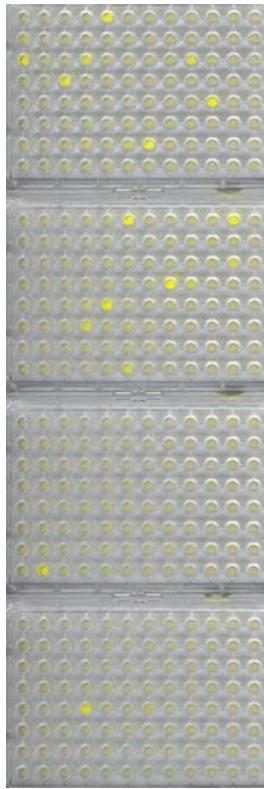


High-throughput screening

Rescreen positives on ethyl ferulate

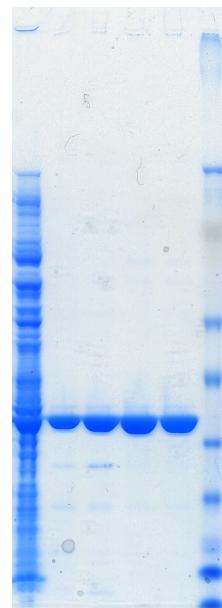

pET vector/ *E. coli* BL21

Rescreen positives by liquid assay

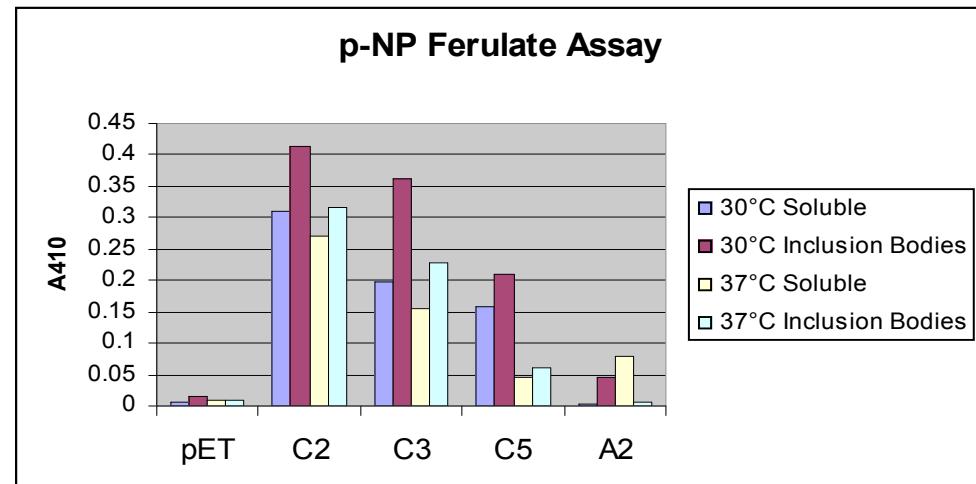

Wong et al. (2013) US Patent 8,361,764 B1


FAE genes and proteins characterization

Clone Name	Gene Location (Insert Size)	Reference Sequence	% Identity to Ref Seq	Number of Residues (Includes tag)	SEQ ID NO	Recombinant Size (kDa)
Rum-C1	1811-2497 (687 bp)	ZP_01061020.1 Hydrolase of ⁻ Family	45	229	1	25.2
Rum-C2	587-1396 (810 bp)	ZP_01061020.1 Hydrolase of ⁻ Family	45	269	2	29.7
Rum-C3	663-1343 (681 bp)	ZP_01061020.1 Hydrolase of ⁻ Family	46	381	3	41.9
Rum6-C4	112-831 (720 bp)	AAF70241 Feruloyl Esterase A	41	246	4	27.1
Rum-C5	60-1001 (942 bp)	ZP_01122099.1 probable lipase/esterase	32	416	5	45
Rum-C6	2871-3827 (957 bp)	YP_169760.1 hypothetical protein lipase/esterase	34	422	6	45.6
Rum-C7	447-1277 (831 bp)	ZP_01777732 putative esterase	48	277	7	32.3
Rum-C8	1849-3207 (1359 bp)	ZP_01061020.1 Hydrolase of ⁻ Family	47	382	8	41.9
Rum-C9	66-1403 (1338 bp)	ZP_01061020.1 Hydrolase of ⁻ Family	47	383	9	41.9
Mul-C10	181-1281 (1101 bp)	ZP_01421329 Beta-lactamase	44	367	10	39.7
Mul-C11	116-1057 (942 bp)	YP_583166 alpha/beta hydrolase	54	322	11	34.7
Mul-C12	1495-2412 (918 bp)	YP_578455 metallophosphoesterase	43	319	12	34.8





Genbank 15, WRRC 12

Wong et al. (2013) US Patent 8,361,764 B1

Novel Feruloyl Esterases - Phylogenetic Tree

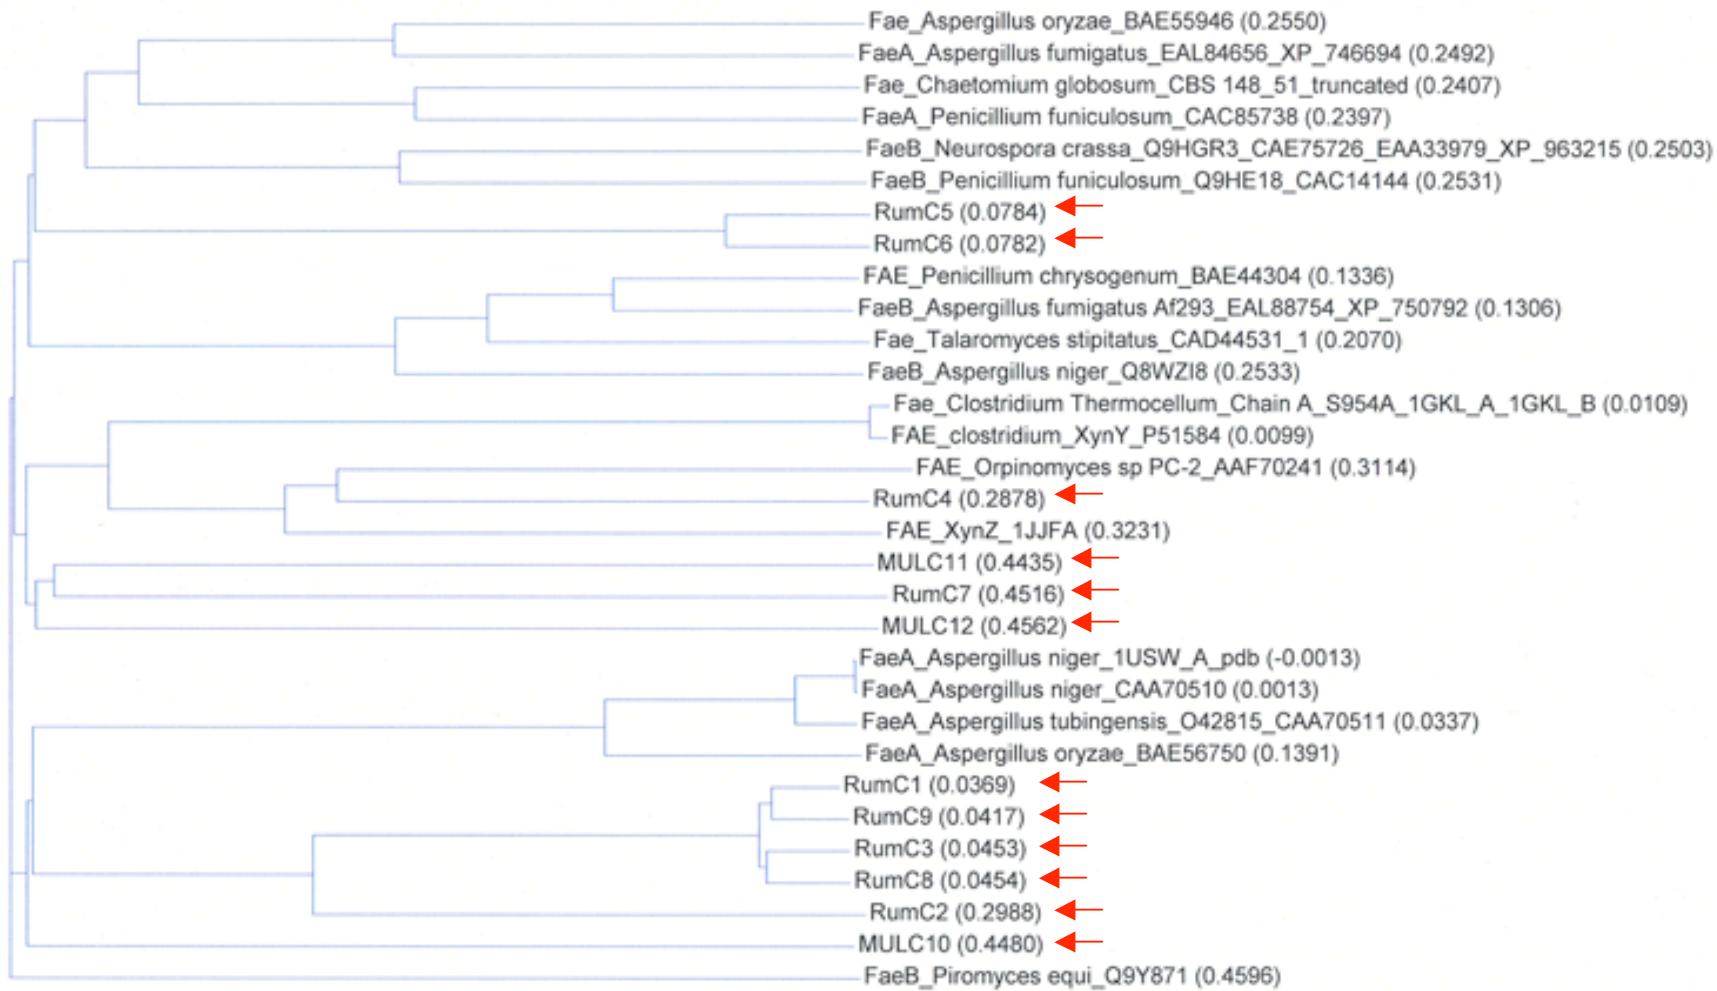

Fae clone 2 enzyme characterization

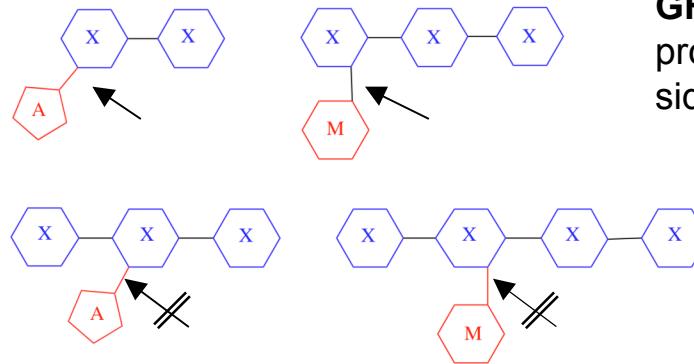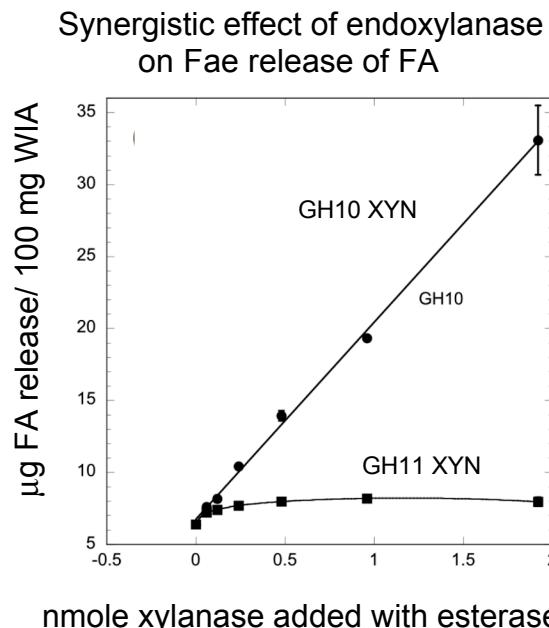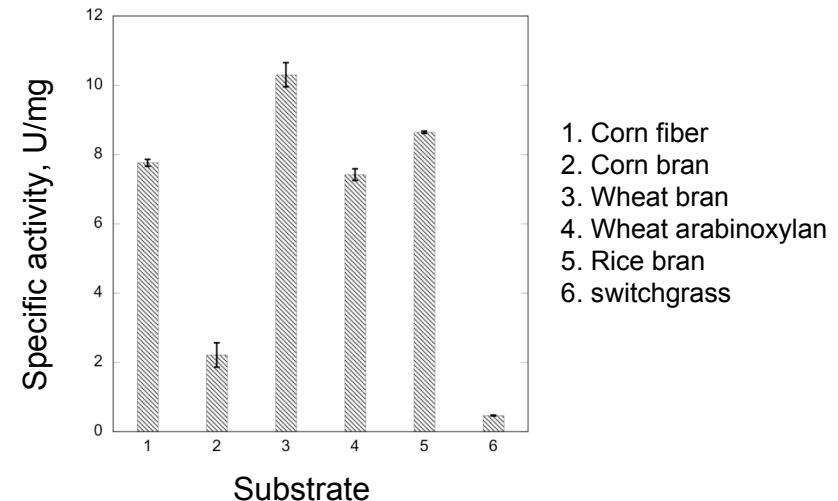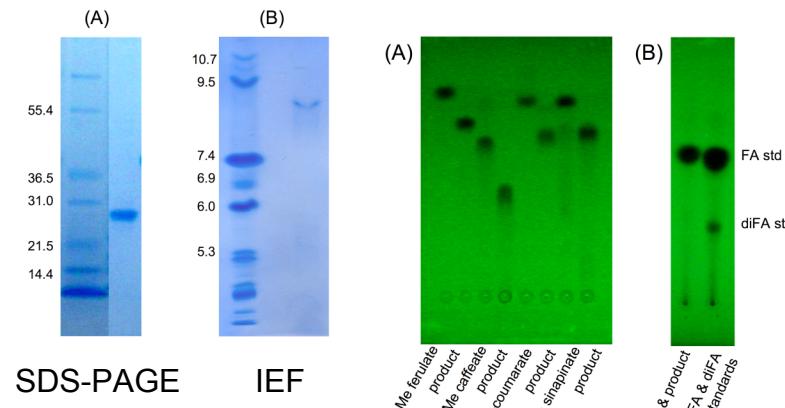

GH10 hydrolysis products with end-linked side groups

GH11 products : internal side groups

The Fae 2 enzyme can hydrolyze only or at a much higher rate araf-ferulic acid side groups linked to the non-reducing end.

Ferulic acid and derivatives

Properties:


- improve anti-oxidative activity
- increase lipid solubility
- enhance gelling effect

Applications:

- protect against photo-oxidative damage
- enhance wound management aid
- synthesis of vanillin
- produce thermal stable biogel

Release of ferulic acid:

- prevent filter blockage in brewing
- increase loaf volume in baking
- increase biomass degradation

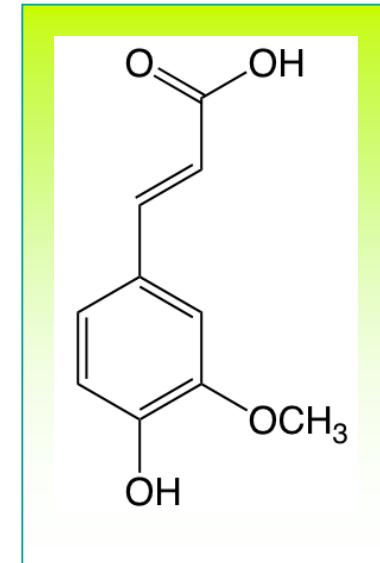

Barley: 0.14% dry w/w

Wheat bran: 0.66%




Sugar beet pulp: 0.8%

Corn bran: 3.1%

Corn fiber: 3-6%

Switchgrass: 0.3-0.5%


Xyloglucan

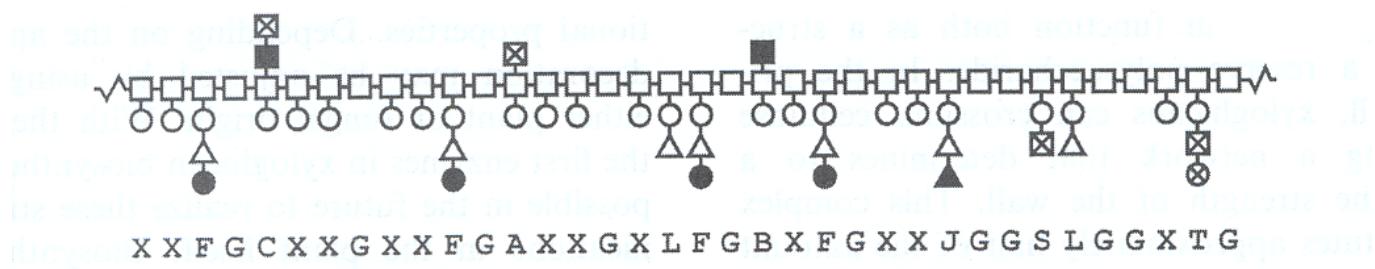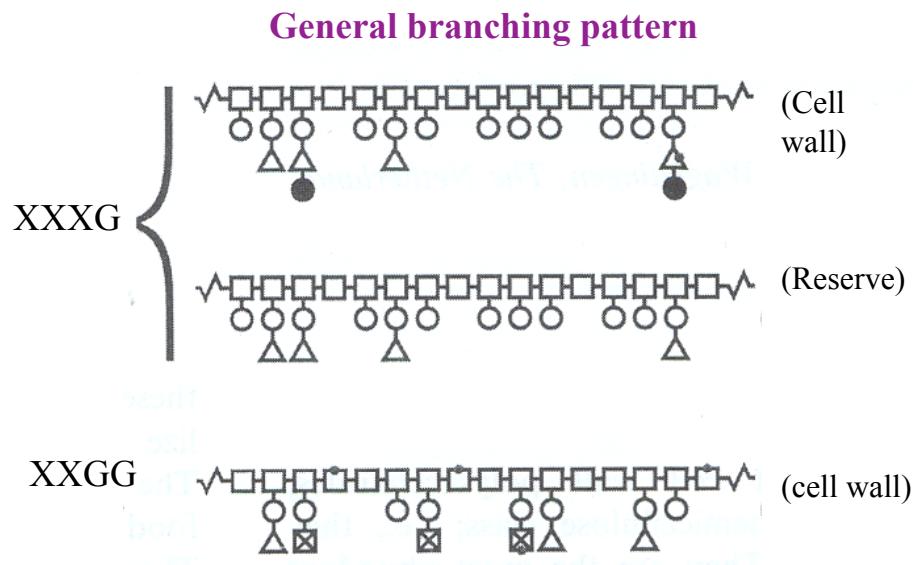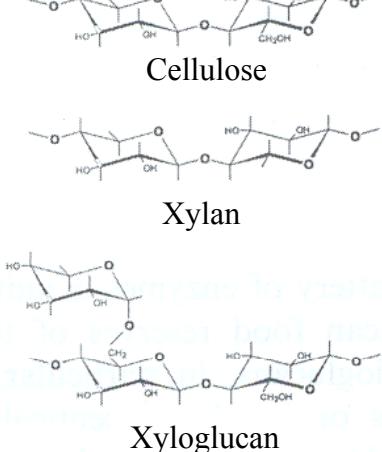


Hypothetical xyloglucan

Vincken (2003) In: *Handbook of Food Enzymology*


Xyloglucan in cell wall

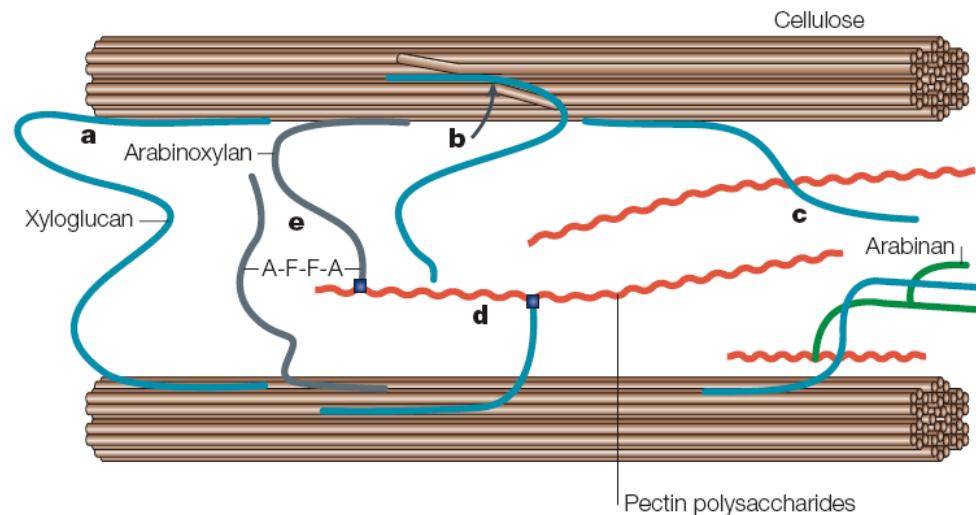

Cosgrove, D. Nature Rev. Mol. Cell Biol. 2005

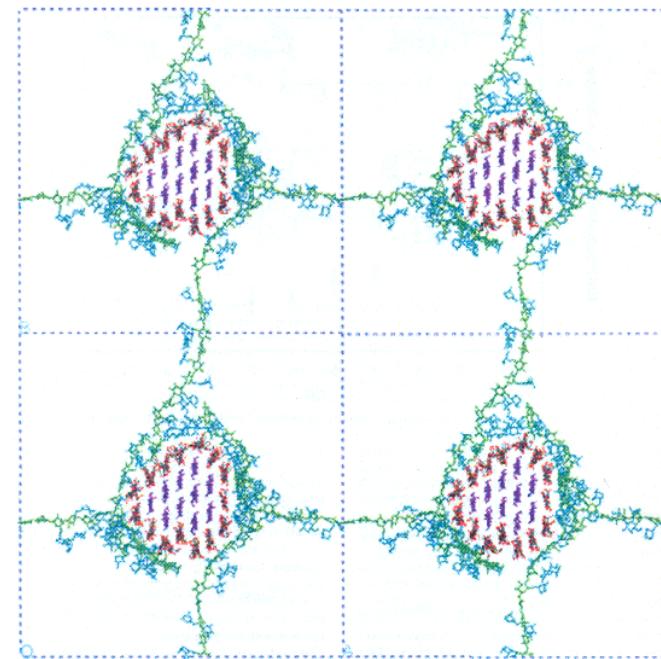

Hanus, J & Mazeau, K. Biopolymers 2006

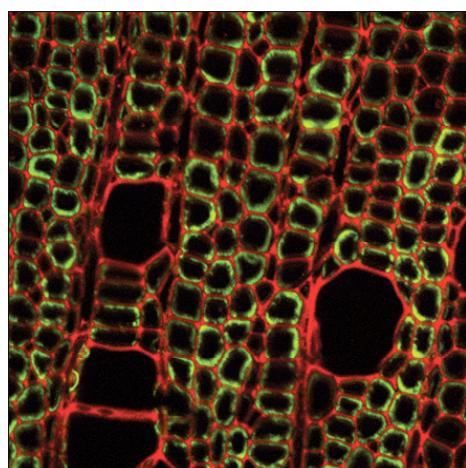


Mellerowicz et al. Ann. Bot. 2008


XEG5A: xyloglucan-specific endo- β -1,4-glucanase

Substrate	Relative activity
Tamarind xyloglucan	5.6
HDP xyloglucan oligosaccharide	2.6
CMC	1.0
Cellulose, xylan, arabinoxylan, pectin	n.d.


Tamarind xyloglucan

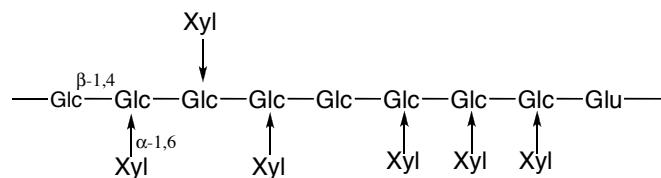


Blocks




XXXG (heptasaccharide),
XG7, DP7

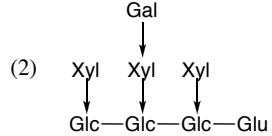

XLXG Octasaccharide),
XG8, DP8

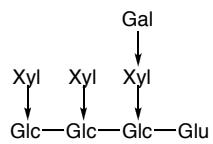

XXLG Octasaccharide),
XG8, DP8

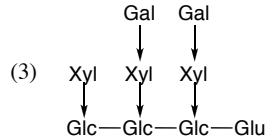

XXLG (nonasaccharide).
XG9, DP9

**Tamarind xyloglucan or
HDP xyloglucan oligosaccharide**

XEG5A

XXXG, XLXG/XXLG, XLLG



XG (isoprimeverose); XG2, DP2




XGG (xylosyl-celllobiose); XG3, DP3




Wong et al. (2010) *Applied Microbiol. Biotechnol.*

XEG5A: xyloglucan-specific endo- β -1,4-glucanase

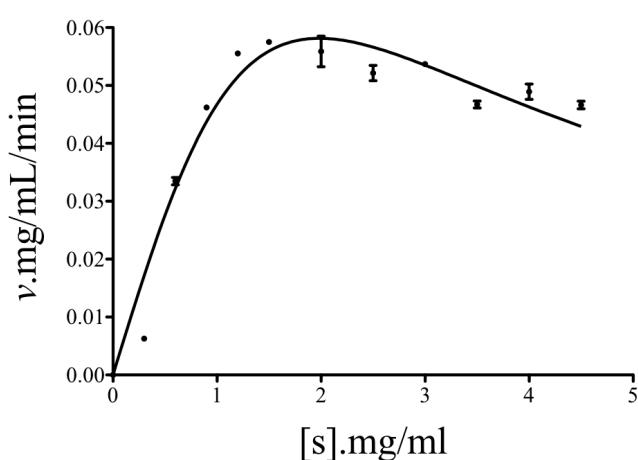


Xyloglucan oligosaccharide HDP-XGP

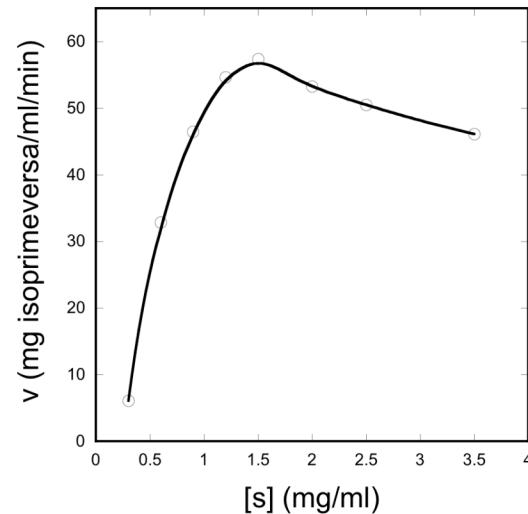


Xyloglucan oligosaccharide DP14

Xyloglucan oligosaccharide DP7 (XXXG):
 $K_i = 1.46 \pm 0.13$ mM

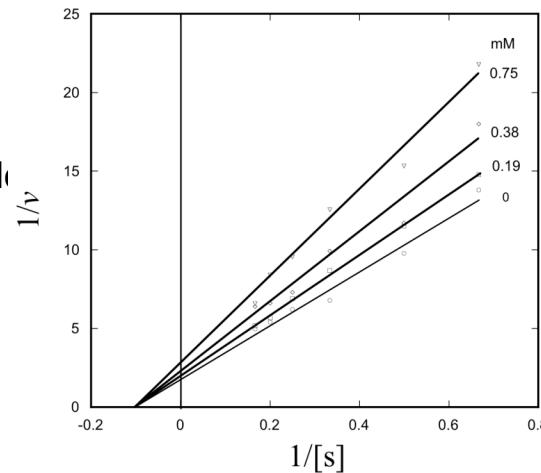



XEG5B: xyloglucan-specific exo- β -1,4-glucanase [EC 3.2.1.155]

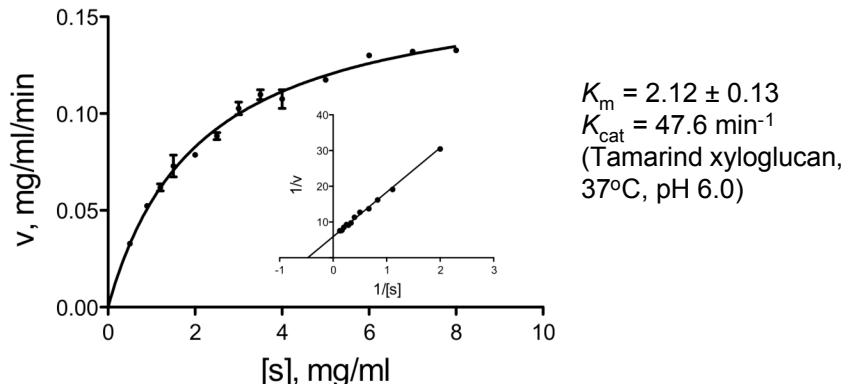

Active only on xyloglucan & HDP-XGO
Activity not detected -CMC, Avicel, acid cellulose, lichenan, laminarin, xylan, arabinoxylan

HPLC analysis of end-products

Tamarind xyloglucan or
HDP xyloglucan oligosaccharide

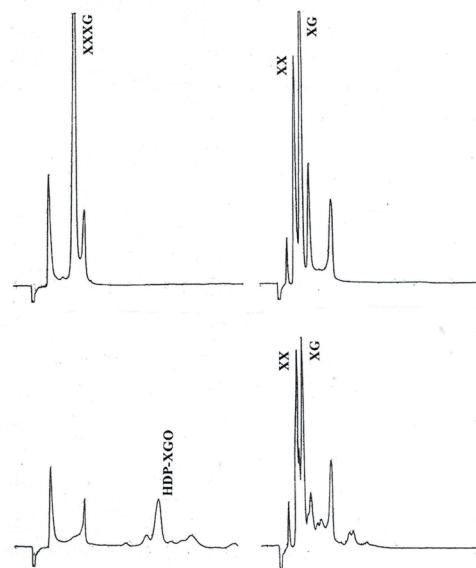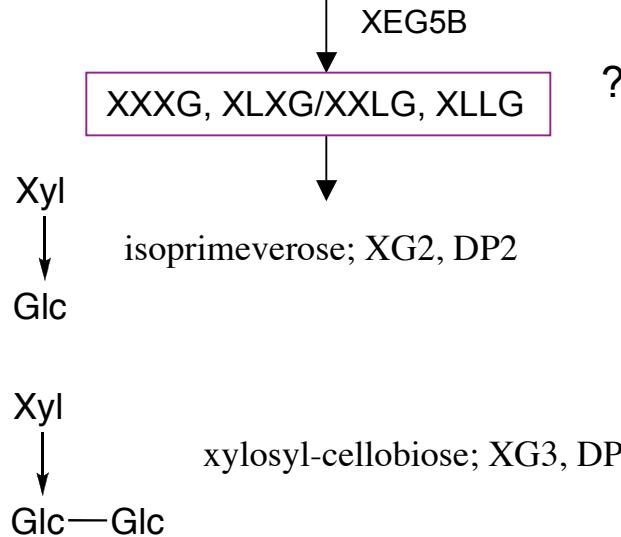

Wong et al. (2010) *Protein & Peptide Lett.*


XEG 5A & 5B Structures

Gene: 1293 bp

Protein: 431 aa (20 aa signal peptide, 45 kD)

Structure: $(\alpha/\beta)_8$ fold, GH family 5

Catalytic: Glu240, Glu362, retaining

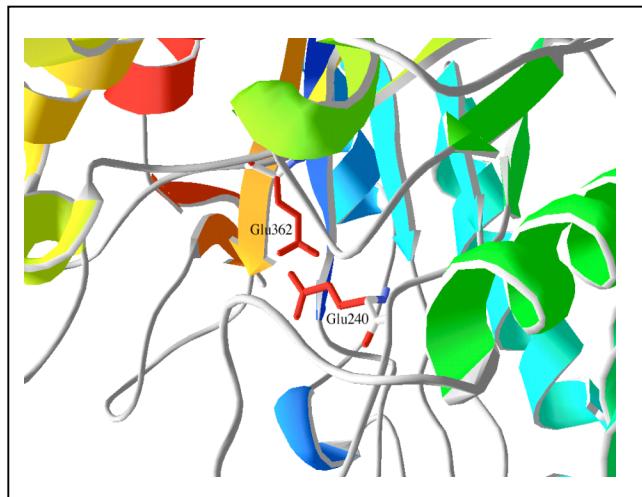


XEG5A - endo

Gene: 1548 bp

Protein: 516 aa (18 aa signal peptide, 45.5 kD)

Structure: $(\alpha/\beta)_8$ fold GH family 5

Catalytic: Glu431, Glu293, retaining

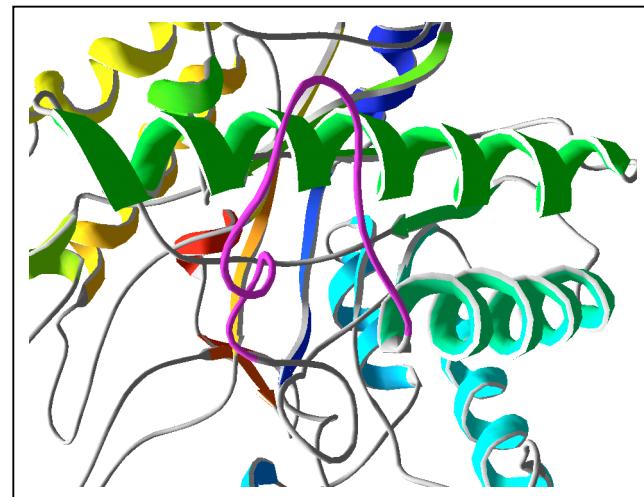


XEG5B - exo

Uses

- * Surfactants derived from oligoxyloglucans
- * Biocomposites by grafting cellulose surfaces with xyloglucans
- * Thermally reversible xyloglucan gels for slow-release delivery

Engineering yeast

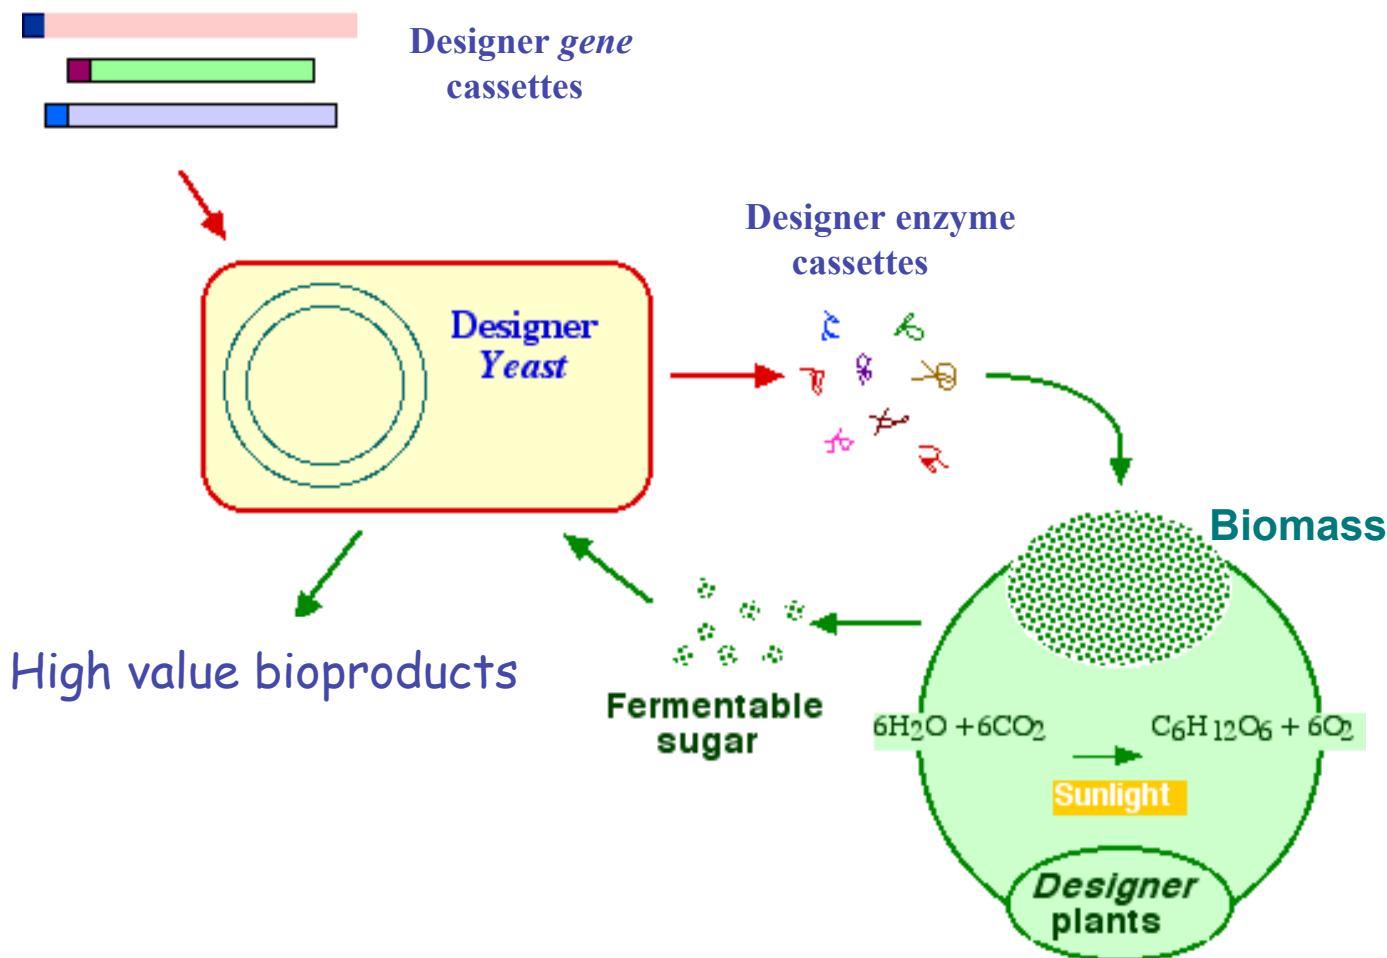

Chromosomal integration of genes in yeast

- Integration of multiple genes
- at precise locations in the yeast chromosome
- resulting in stable clones
- rapid testing of enzyme combinations in a cell-based system





Feruloyl esterase


endo-Xylanase

endo-Cellulase

Homologous recombination

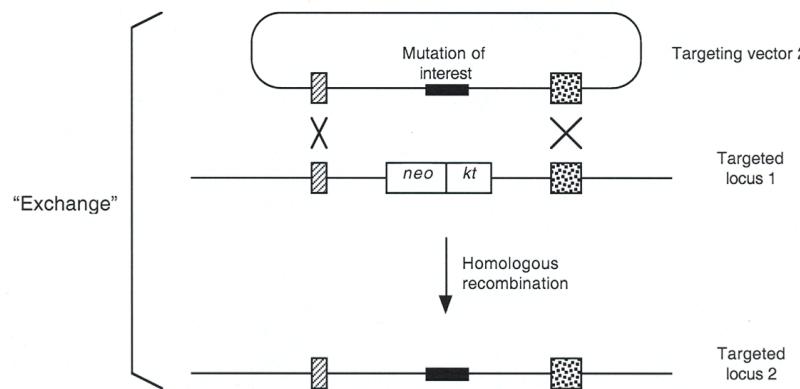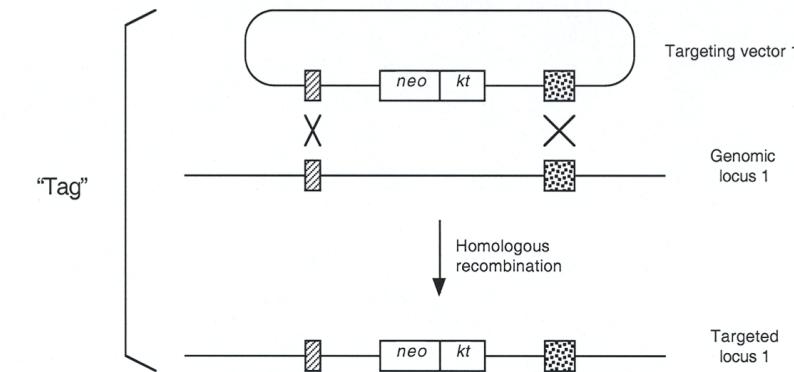

Double-hit replacement

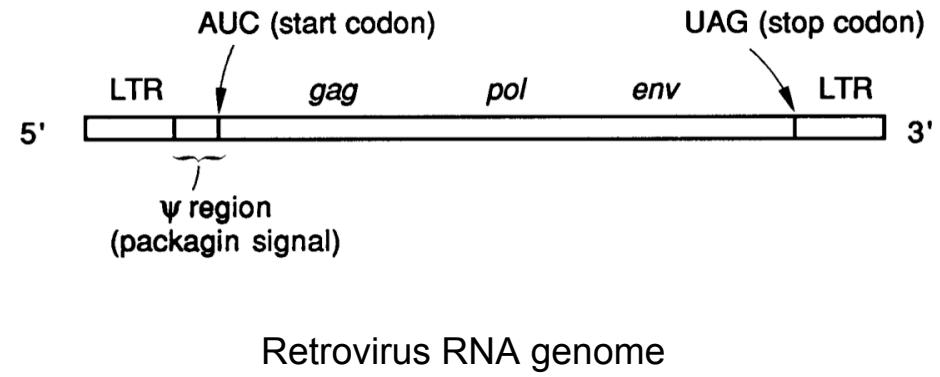

Retrovirus RNA genome

LTR = long terminal repeats

gag = viral core protein

pol = reverse transcriptase

env = envelop

psi region = packaging signal

D. Wong (2006) *The ABCs of Gene Cloning*

Ty elements in *Saccharomyces cerevisiae*



Table 1. Distribution of Ty Elements by Chromosome

Chr. no.	Number of insertions ^a					Total Ty insertions on chromosome
	Ty1	Ty2	Ty3	Ty4	Ty5	
I	6 (1)	1	1	0	0	8
II	13 (2)	2 (1)	1	2	0	18
III	11	2 (1)	0	1	2 (1)	16
IV	20 (5)	3 (3)	6	2	0	31
V	18 (2)	5	4	3	2	32
VI	8	1 (1)	0	1	0	10
VII	25 (3)	2 (2)	6 (1)	4	1	38
VIII	14 (1)	1	3	3 (1)	1	22
IX	5	1	2 (1)	1	0	9
X	14 (2)	4	1	3 (1)	0	22
XI	11	1	1	0	1	14
XII	18 (4)	3 (2)	4	1	0	26
XIII	15 (4)	2	0	3	0	20
XIV	5 (2)	1 (1)	4	3	0	13
XV	18 (2)	3 (2)	4	2	0	27
XVI	16 (4)	2	4	3 (1)	0	25
Genome total	217 (32)	34 (13)	41 (2)	32 (3)	7 (1)	331

^aInsertions include full-length elements, solo LTRs, and LTR fragments. Numbers of full-length elements are shown in parentheses.

From *Genome Res.* 8:464-478 (1998)

Single gene clones:

endoglucanase, exoglucanase, β -glucosidase, feruloyl esterase, endoxylanase, α -amylase, glucoamylase,

Double clones (co-integration):

- (1) endoxylanase + feruloyl esterase
- (2) α -amylase/glucoamylase


Triple clones:

- (1) endoglucanase + exoglucanase + β -glucosidase
- (2) endoglucanase + endoxylanase + feruloyl esterase




Triple Clones


endoglucanase + exoglucanase + β -glucosidase

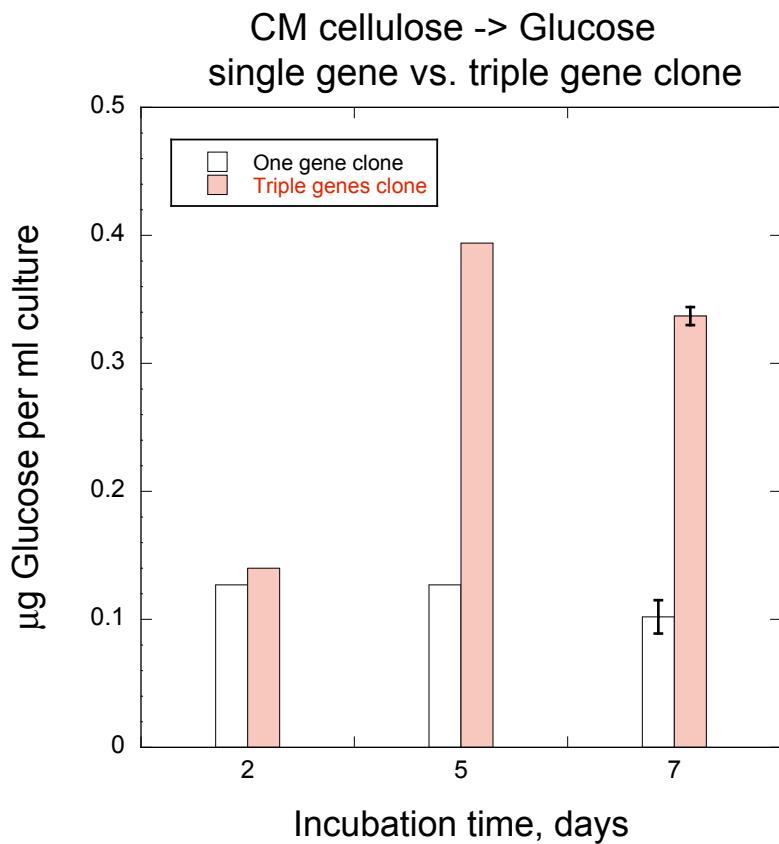


endoglucanase + endoxylanase + feruloyl esterase

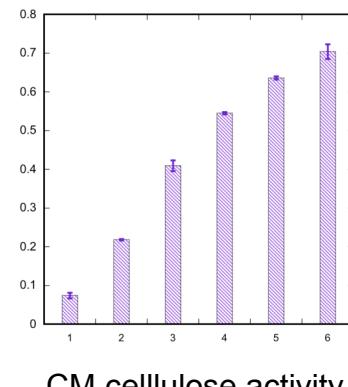

Arabinoxylan activity

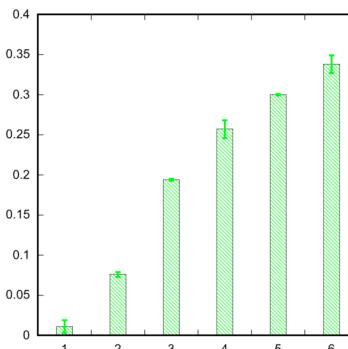


NP ferulate activity

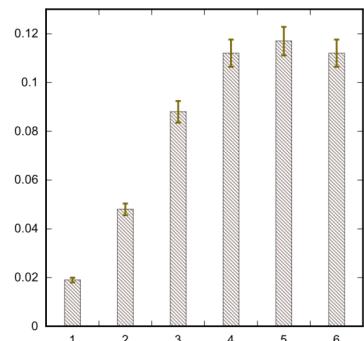

High-Throughput Functional Screening for active clones in Libraries

Metagenomic libraries

- Gene discovery
- Gene variants

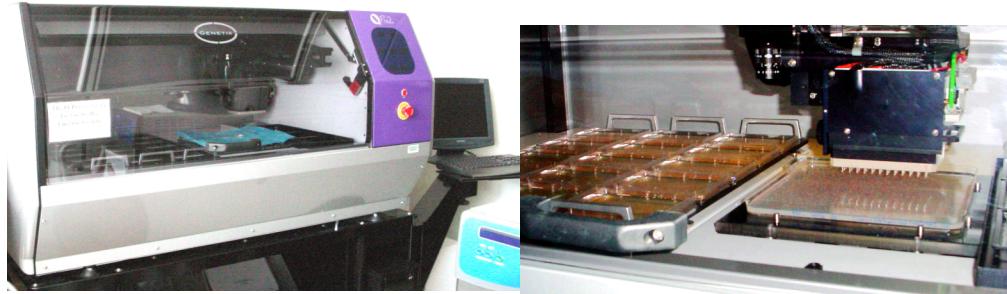

Q-Pix



Liquid handling

Microplate
reader



Capabilities



Incubator-shaker
for microplates

- Assay development
- Assay under bioprocess condition

Genes and Enzymes

<i>Enzymes</i>	<i>Genes</i>	<i>Expressed</i>	<i>Purified</i>	<i>Characterized</i>
ferulic acid esterase*	12	10	10	10
α -glucuronidase*	(1)	1	1	1
glucuronoyl esterase*	(1)	1	1	1
arabinanase*	9	4	3	2
xyloglucanase*	6	2	1	1
mannanase-glucanase (bifunctional)*	1	1	1	1
rhamnogalacturonanase	1	1	0	0
galactanase	4			
arabinofuranosidase	2			
endoxylanase	2			
Galactomannanase	1			
acetylxyran esterase	2			

Yeast vectors episomal, integrative

Yeast clones single gene, double genes, triple genes









ADDITIONAL ENZYME/PROTEIN RESEARCH AREAS:

- ❖ Mutagenesis and directed evolution of enzymes
- ❖ Engineering yeast for consolidated bioprocessing
- ❖ Enzymatic fragmentation of crystalline and complex biopolymers
- ❖ Enzymatic modification of food proteins




Backgrounds

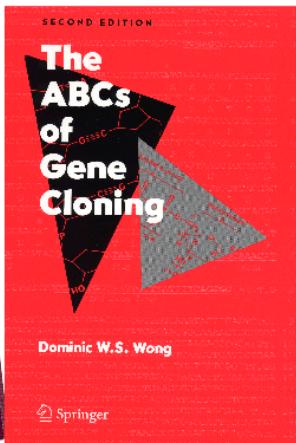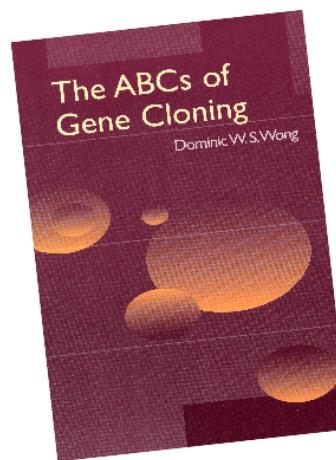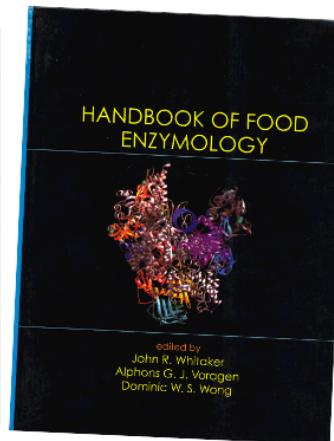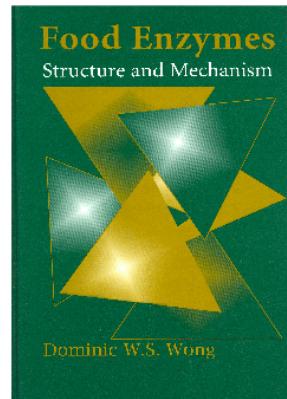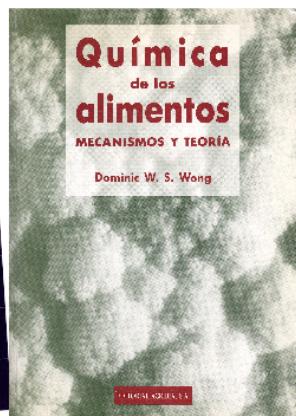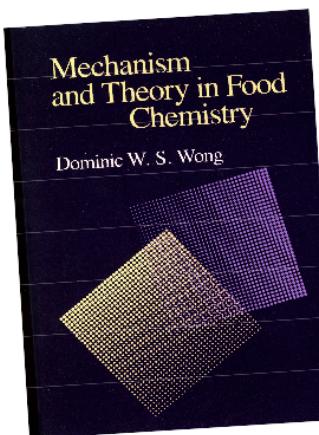


Enzymes.....


Enzymes.....

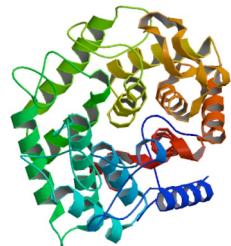

Endoglucanase

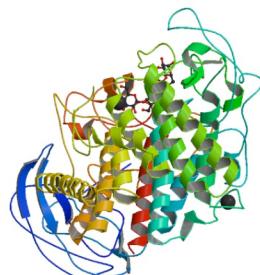

Cellobiohydrolase

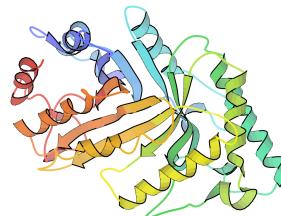


α -amylase




Feruloyl esterase



Endoxylanase

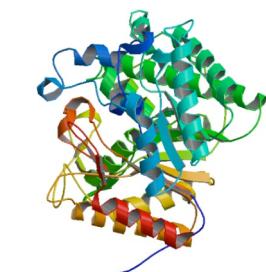

β -Glucosidase

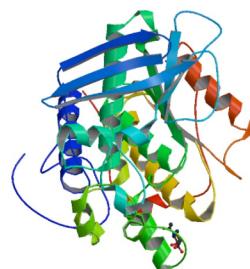

Glucuronoyl esterase



β -Xylosidase



Glucoamylase
(catalytic domain)

- ❖ Sarah Batt
- ❖ Victor chan
- ❖ Kurt Wagschal
- ❖ Rena Kibblewhite
- ❖ Charles Lee
- ❖ Amanda McCormack
- ❖ Meiling Shang
- ❖ David Wan
- ❖ Dominic Wong

- ❖ Dr. Peter Biely, Slovak Academy of Science
- ❖ Dr. Mario Murakami, LNBio, Brazil
- ❖ Dr. Mary Jo Zidwick, Cargill Biotech Center
- ❖ Professor Roy Doi, UC Davis
- ❖ Dr. Hans Liao, OPX Biotechnologies

Thank You

